


SMX-M1-UF3-NF1-AF6-PRE

RGB

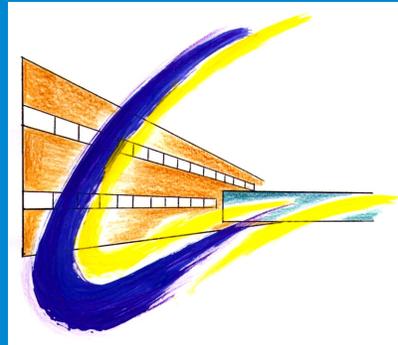


Joan Botella Vinaches
Institut Castellbisbal

LED (*Light Emitting Diode*).

LED

- Conventional

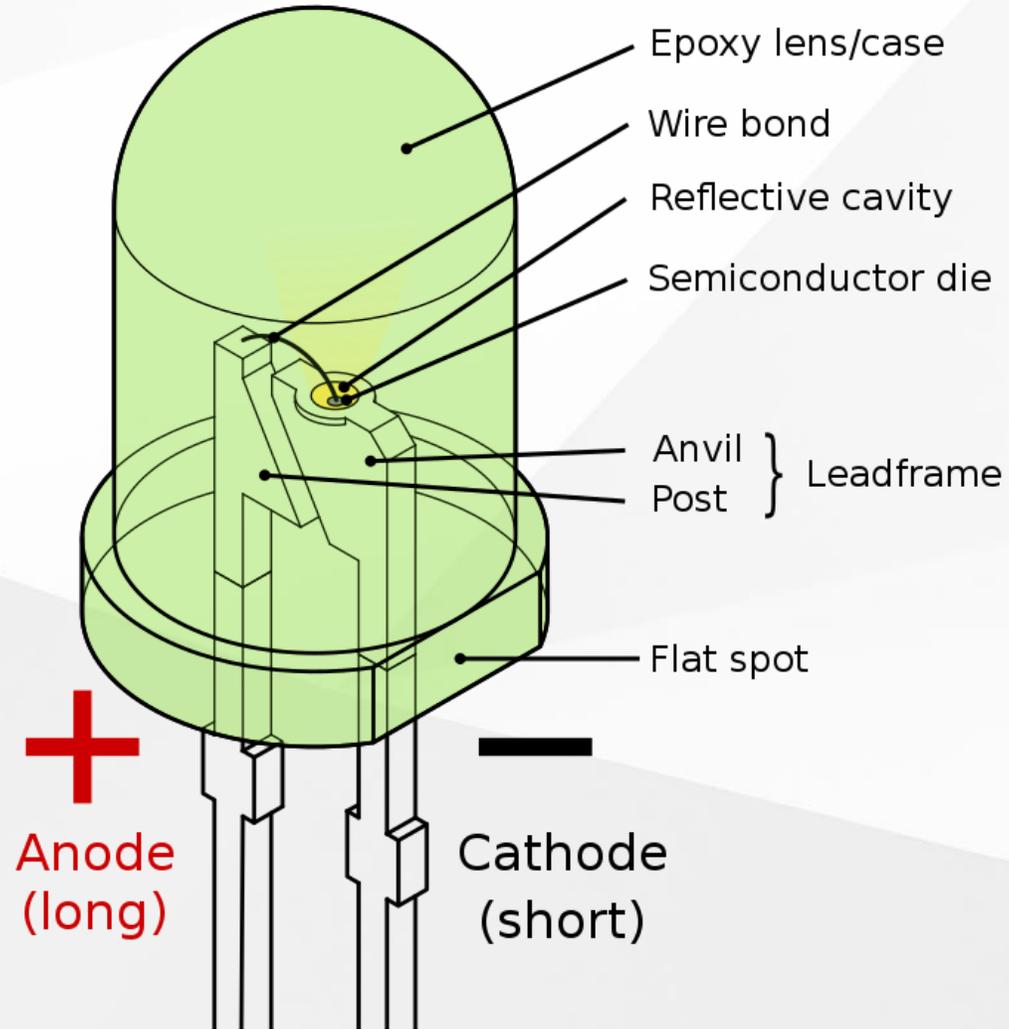

LED

- RGB



LED

- Non addressable RGB strip (analògica)




LED

- Addressable RGB strip (digital)




LED

3528 SMD LED Chip

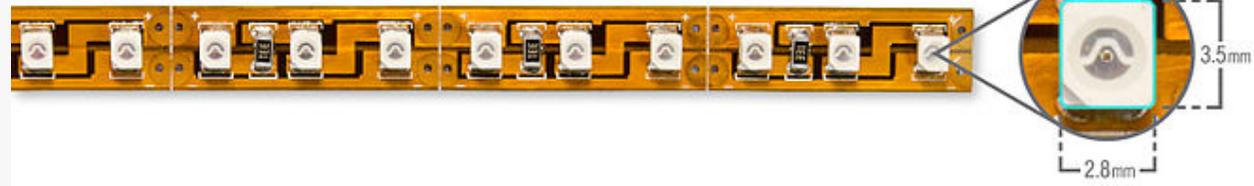

5050 SMD LED Chip

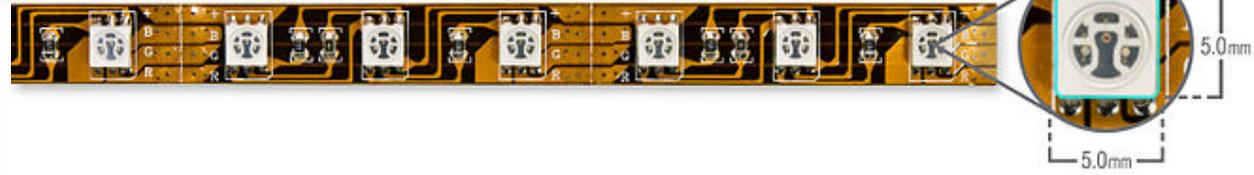

3014 SMD LED Chip



3020 SMD LED Chip



2835 SMD LED Chip




LED



LED

- RGB fan

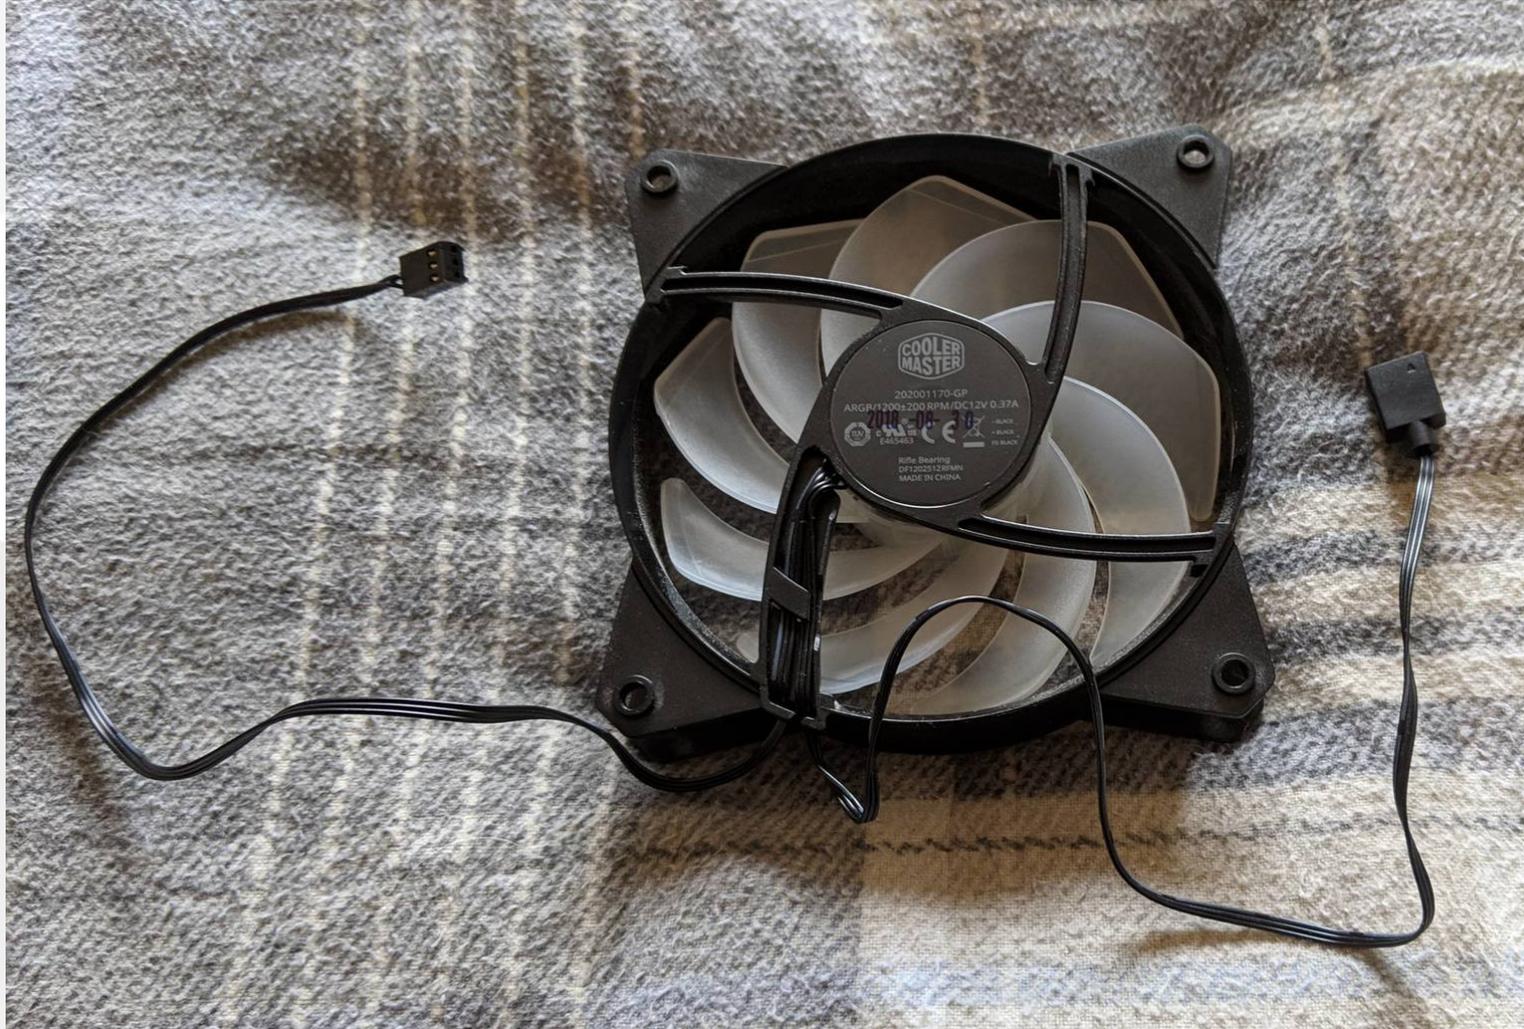

A la Placa Base

A la Placa Base



RGB_HEADER
ADD_GEN2


• Connectors addressable i non addressable

10. Aura Addressable Gen 2 header

The Addressable Gen 2 header allows you to connect individually addressable RGB WS2812B LED strips or WS2812B based LED strips.



The Addressable Gen 2 header supports WS2812B addressable RGB LED strips (5V/Data/Ground), with a maximum power rating of 3A (5V), and the addressable headers on this board can handle a combined maximum of 500 LEDs.

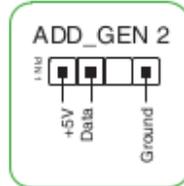

Before you install or remove any component, ensure that the power supply is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, or components.



- Actual lighting and color will vary with LED strip.
- If your LED strip does not light up, check if the addressable RGB LED strip is connected in the correct orientation, and the 5V connector is aligned with the 5V header on the motherboard.
- The addressable RGB LED strip will only light up when the system is powered on.
- The addressable RGB LED strip is purchased separately.

11. Aura RGB headers

The RGB headers allow you to connect RGB LED strips.



The RGB headers support 5050 RGB multi-color LED strips (12V/G/R/B), with a maximum power rating of 3A (12V), and no longer than 3 m.



Before you install or remove any component, ensure that the ATX power supply is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, or components.





- Actual lighting and color will vary with LED strip.
- If your LED strip does not light up, check if the RGB LED extension cable and the RGB LED strip are connected in the correct orientation, and the 12V connector is aligned with the 12V header on the motherboard.
- The LED strip will only light up when the system is powered on.
- The LED strip is purchased separately.




- Exemples:
 - [Asus Aura Sync](#)
 - [Gigabyte RGB Fusion 2.0](#)
 - [MSI Mystic Lights](#)

Amb Targeta d'Expansió

ONLY COMPATIBLE TO 12V RGB DEVICE

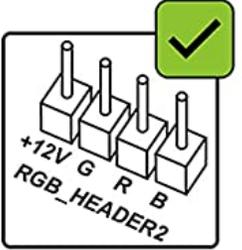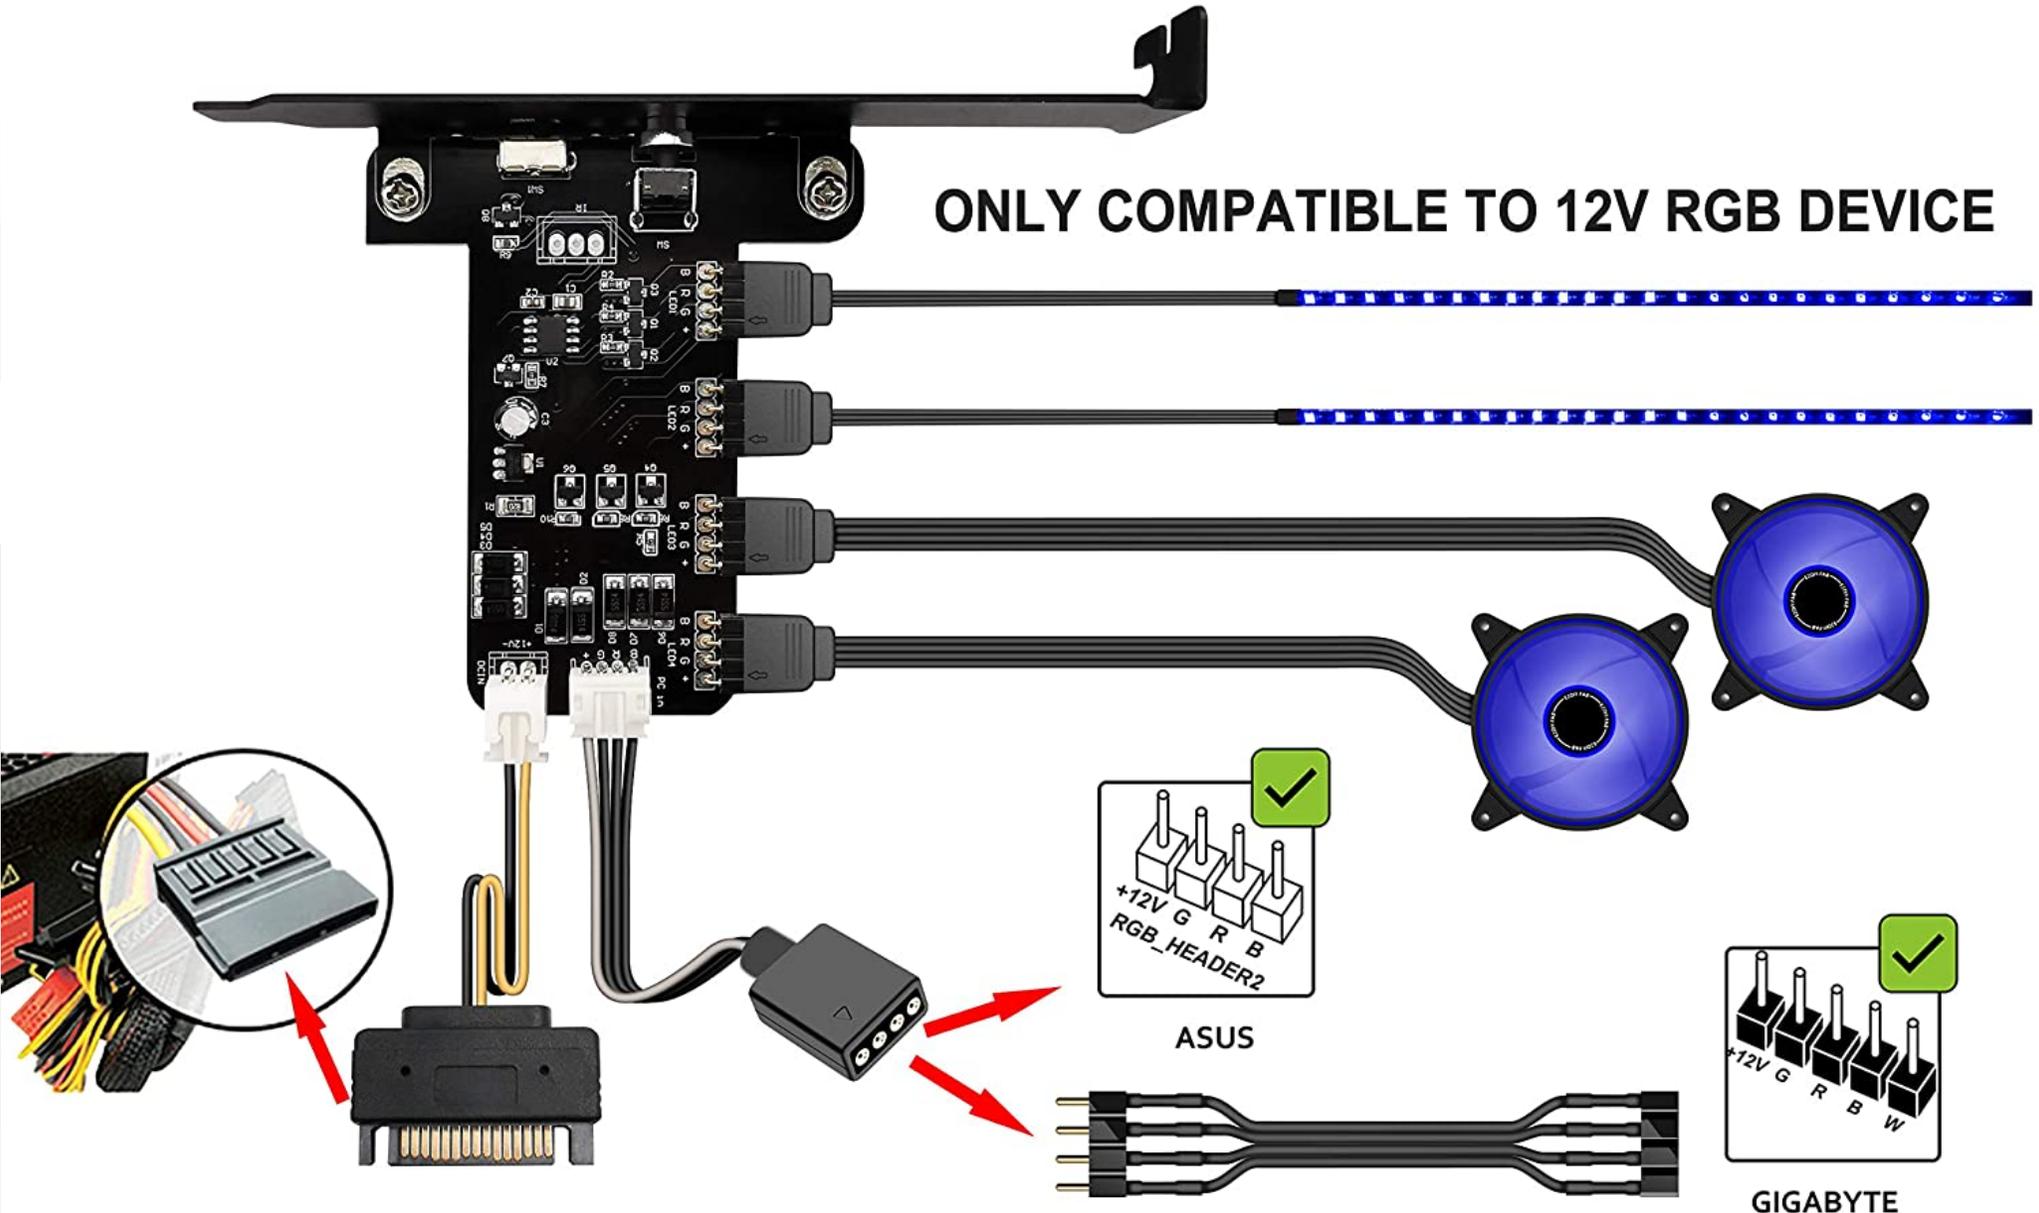

ASUS

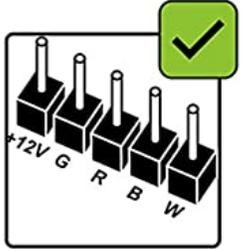

GIGABYTE

Per USB

Intern

Per USB - Intern

- Controladora



Per USB - Intern

- Fan hub



Extern

Per USB - Extern



Exemples

Per USB - Exemples


- [Corsair iCUE](#)

Software

- Gigabyte RGB Fusion



- Corsair iCUE

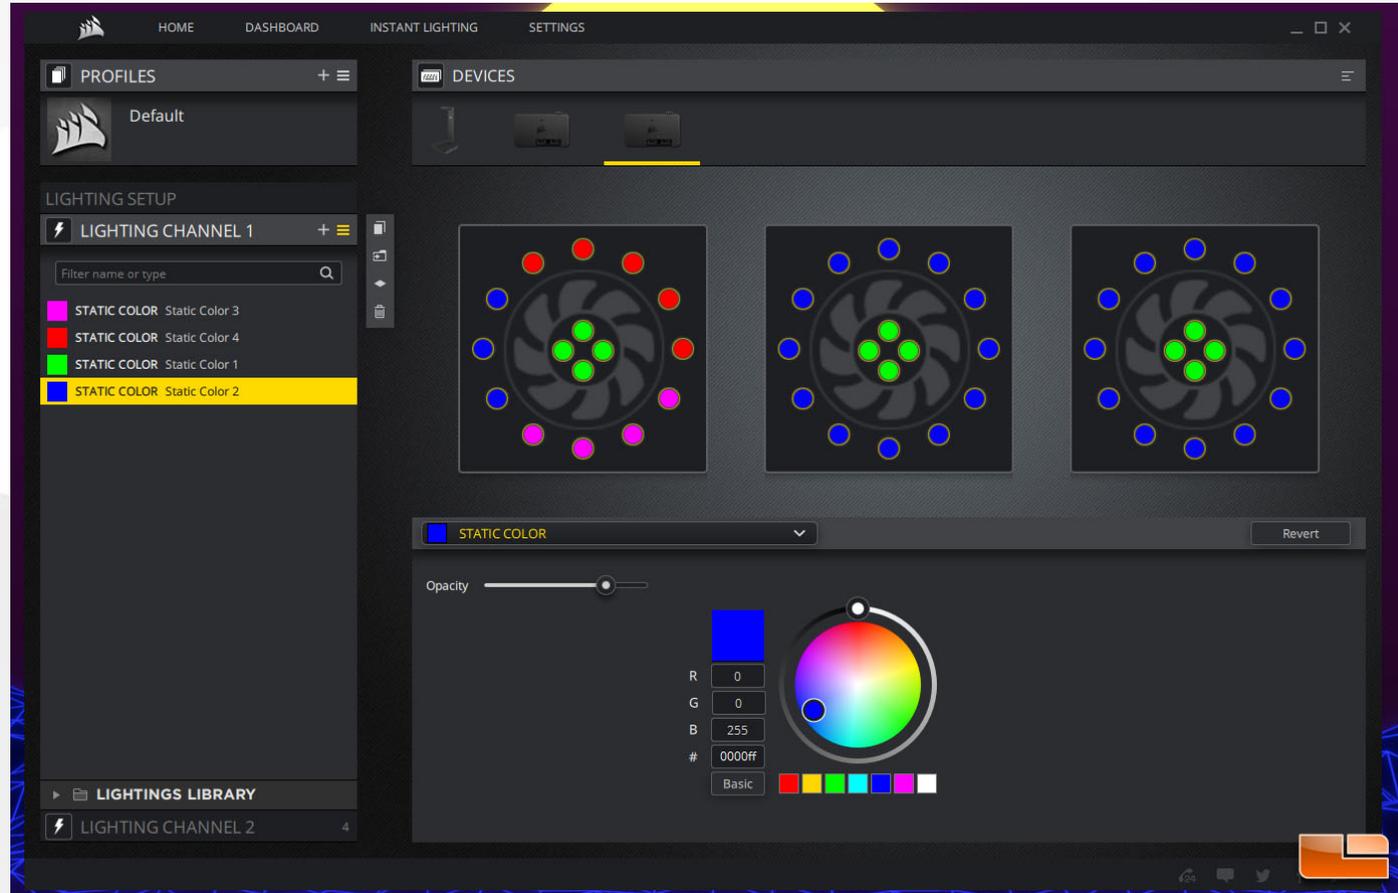

- OpenRGB

